

## BULB REPLACEMENT

### Headlamp Bulb

Mounted in the front body are the two headlamp units, each of which houses a halogen projector type low beam lamp (upper), and a halogen high beam lamp (lower) including the sidelamp bulb.


For access to the headlamp bulbs, first remove the clear cover and mask from the body (see previous pages).

#### **⚠ WARNING:**

- Allow bulbs to cool before attempting removal, or your fingers could be burnt.
- Halogen bulbs have pressurised gas inside and can burst if you drop or scratch the bulb. You or others could be injured.
- Be sure to read and follow instructions on the bulb packaging.

**NOTICE:** Do not touch a halogen bulb glass envelope with the fingers, as the greasy deposit left behind will greatly reduce bulb life. Use a paper tissue to handle the bulb.

*Low beam bulb:* Disconnect the single cable, release the spring wire clip, and withdraw the 55W H1 bulb. On refitting, note that the bulb is keyed to allow only one orientation.

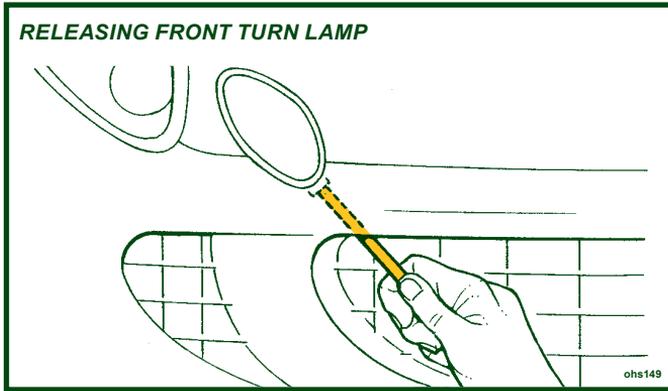

**High beam bulb:** Disconnect the two cables from the bulb, release the spring wire clip, and withdraw the 55W H7 bulb. On re-fitting, note that the bulb is keyed to allow only one orientation.  
**Parking lamp:** Twist the bulb holder counterclockwise to release from the main beam lamp, and withdraw the bayonet fitting T4 W bulb.

### Front Turn Indicator Lamp Bulbs

For access to the front turn indicator bulb, the lamp unit must be released from the body. Using a suitable stiff rod or screwdriver blade inserted through the access hole in the outer top corner of the air intake aperture, press back the lamp retaining clip at the front end of the lamp, and withdraw the lamp from the body. Twist the bulb holder counterclockwise to release from the lamp, and replace the bayonet fitting amber bulb.

After replacing the bulb and holder, ensure the rubber seal is correctly positioned around the lamp. Engage the tongue at the rear end of the lamp unit with the body flange, and press the front end of the lamp firmly down until a distinct 'click' is heard, indicating engagement of the retaining clip. Pull up on the front end of the lamp to check security.

### Side Repeater Lamp Bulbs

The side marker lamps mounted on the front and rear wheelarch lips, each use four longlife LEDs which are not serviceable. In case of failure, the lamp unit should be replaced by your dealer.